



**ROAIRVAC R32**  
**No. 1000001231**

dated: 11/15

<b>Item no.</b>	<b>Description</b>	<b>Article no.</b>	<b>Quantity</b>
2	Power supply cords	R17A60800	1
9	Power socket	R17A61000	1
11	Shell connecting rod	1500001957	1
12	Cross screw	R17A61100	12
13	Gasket	R17A61200	12
14	Right and left shell	1500001958	1
15	Handle splipcover	R17A61400	2
17	Running capacitor 100mF	R17A61800	1
20	Capacitor 20mF	1500001962	1
23	Junction box	1500001963	1
26	Electrical startor	1500001965	1
27	Thermal protector	R17A62000	1
38	Resillent coupling	1500001972	1
39	Pump body	1500001973	1
41	Oil tank o-ring	R17D63500	1
42	Filtrate part ayys	R17D63800	1
45	Gauge protector	1500001974	1
46	Gauge	1500001975	1
47	Solenoid valve	1500001976	1
48	Base assy	1500001977	1
51	Oil tank	R17D63900	1
56	Seal	R17A64400	1
57	Screw M8x7	R17A64500	1

**IMPORTANT!** To assure safety and reliability, repairs, maintenance and adjustment must be preformed by ROTHENBERGER Kelkheim or authorized Service-Centers. Always use Original-Service-Parts. Order your accessories and spare parts from your specialist retailer or using our Service After Sales hotline